



OPERATING INSTRUCTIONS RO Mini

1. OUTLET TUBE

Tube feeds RO water to the High Sparkle machine.

2. INLET TUBE

Tube feeds mains water to the RO System.

3. BYPASS FITTING TUBE

Fitting to bypass the RO system in case of RO impairment.

IN CASE OF RO IMPAIRMENT

1. Turn water supply off.
2. Remove tube 1 from the elbow fitting by pushing the dark grey ring away from the tube and pulling the tube out.
3. Attach tube 1 to fitting 3 by pushing the tube into the fitting.
4. Remove tube 2 from the RO unit, by pushing the dark grey ring away from the tube and pulling the tube out.
5. Attach tube 2 to fitting 3 by pushing the tube into the fitting.
6. Ensure tubes 1 and 2 are secured inside the fitting by gently tugging, the tubes should remain connected to the fitting.
7. Turn water supply back on. Use machine as per normal and contact Rhima service to remedy RO system.

 **Rhima Australia Pty Ltd**
72-74 Woodlands Drive Boroondara 3195
Tel: 03 8586 5444 Fax: 03 8586 5454
Quincy 60 9601 www.rhima.com.au

Rhima New Zealand Ltd
Unit 7, 13 Beattie Tinsley Crescent
Albany Auckland 0632 New Zealand
Tel: 09 414 5525
www.rhima.co.nz

Rhima Singapore Pte Ltd
10 Tampines North Drive 4 #05-09
JTC Space @ Tampines North Singapore 528553
Tel: +65 9107 8943
www.rhima.sg

